

# HG<sup>®</sup>

machinery

## descaler for espresso & pod-coffee machines



based on  
citric acid  
for 6 treatments

Tested on/  
Suitable  
for a.o.:

Illy  
Krupps  
DeLonghi  
Solis  
Solac  
Bosch  
Magimix  
Nespresso  
Siemens  
Gaggia  
Philips  
Kitchenaid  
Melitta  
Miele  
Jura

500 ml e

### HG descaler for espresso & pod-coffee machines

HG "descaler" for espresso & pod-coffee machines" has been developed especially for removing scale from different types of espresso and pod-coffee machines.

HG "descaler" works safely and quickly; it is odour-free and fully biodegradable. With regular use of HG "descaler", the coffee continues to taste good, the machine retains its speed, and you extend the life of your espresso or pod-coffee machine!

**Directions for use:** Pour 75ml HG "descaler" in the water reservoir and fill it up to 750ml water (10x diluted). Leave this solution to work for 10 minutes. Then turn the machine on and let half of the liquid run through. Switch the machine off, leave the product to work for 10 minutes, and then let the rest of the liquid run through until the reservoir is completely empty. Rinse the water reservoir properly after the treatment, fill it with clean tap water and then use the machine at least 3 times just with water to ensure no scale or unwanted tastes remains. If you have a pod-coffee machine, put a pod holder with a used coffee pod in

the machine to collect possible scale. This prevents any blockages in the outflow. If not all scale was removed, repeat the treatment. For descaling normal coffee makers, kettles, and washing machines, we recommend HG "quick descaler for coffee makers, kettles and washing machines".

**Use:** 75ml per treatment. 1 bottle is enough for approx. 6 treatments.

**Attention: Transport and store the bottle upright.** Do not breathe in any vapours from the machine! Prevent long-term contact with stainless steel and aluminium. Always read the instructions of your equipment before use. Do not use on calciferous and non acid-resistant surfaces, such as marble, Belgian bluestone, etc.


Medical personnel can request the data sheet via +31 (0)36 54 94 777

The consumer's information sheet can be obtained via [www.HG.eu](http://www.HG.eu)

QUESTIONS ABOUT  
CLEANING AND MAINTENANCE?  
[www.HG.eu](http://www.HG.eu)



0532300105006 1607

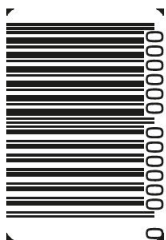

**WARNING H319-** Causes serious eye irritation. **P101-** If medical advice is needed, have product container or label at hand. **P102-** Keep out of reach of children. **P264-** Wash hands thoroughly after handling. **P305+P351+P338-** IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

Made in The Netherlands by HG International b.v.,  
Damsluisweg 70, 1332 EJ Almere, The Netherlands,  
Tel.: +31 (0)36-5494700